


CHIROPRO L

ENG Instructions for use




C € 0123 **Rx Only**

Set REF 1700349-001

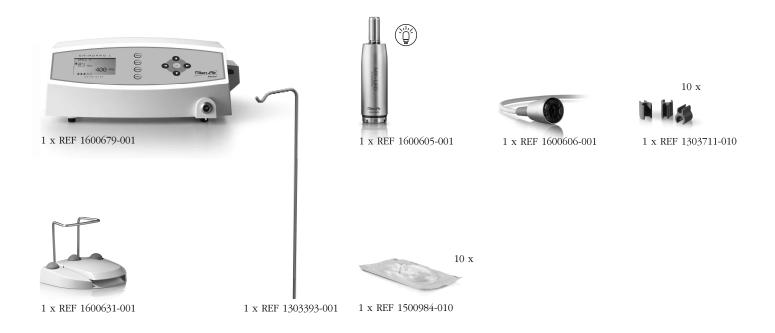

Options

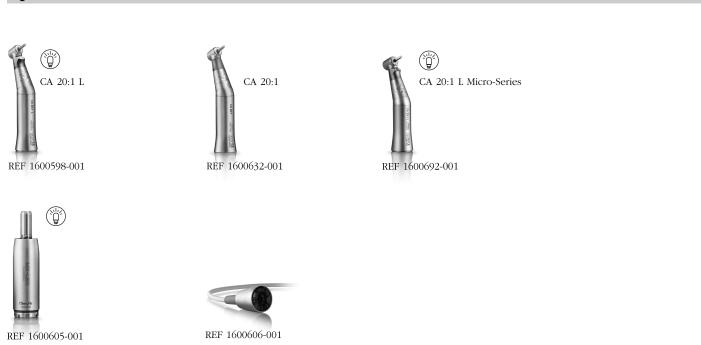










REF 1500984-010

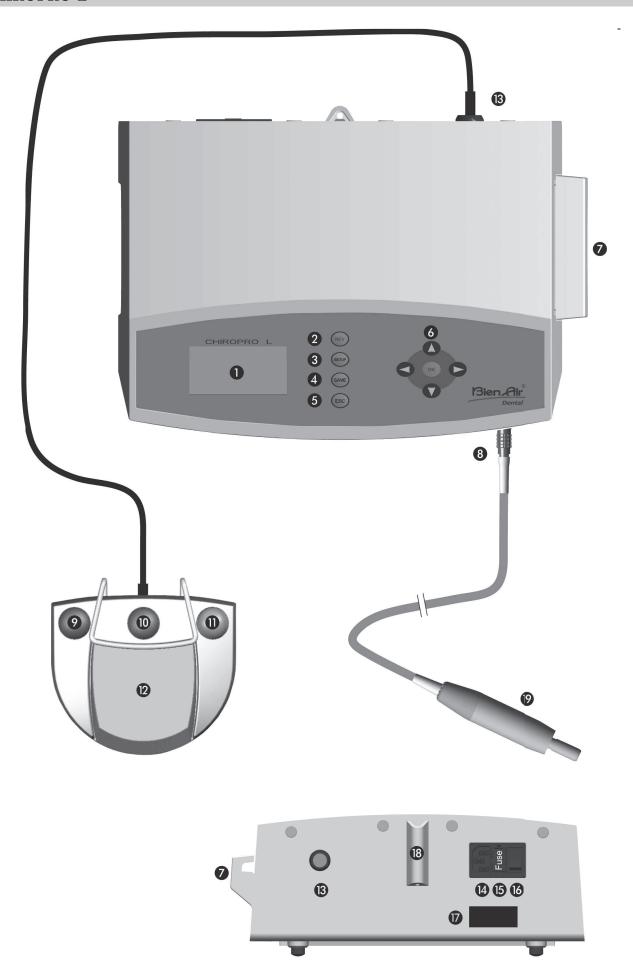

Summary

Starting display



Available values

Surgery

Procedure 3

Procedure 4

MAIN MENU	Steps	Ratio	Speed in rpm	Torque in Ncm	Irrigation in ml/min
Implantology	Round bur 1	128:1	100 - 40'000 rpm	0.48 - 4.8 Ncm	30 ml/min 20%
Endodontics	Round bur 2	64:1	with a CA 1 : 1	with a CA 1 : 1	60 ml/min 40%
Surgery	Drill 1	30:1			90 ml/min 60%
<u> </u>	Drill 2	27:1	Depends on the CA	Depends on the CA	120 ml/min 80%
	Drill 3	20:1	† '		150 ml/min 100%
	Drill 4	16:1	1		
	Tapping	10:1			
	Tap unscrewing	1:1	1		
	Implant screwing	1:2			
	Unscrewing	1:5	-		
Implantology Endodontics	Open pulp chamber endo file 1	128:1 64:1	100 - 40'000 rpm with a CA 1 : 1	0.48 - 4.8 Ncm with a CA 1 : 1	30 ml/min 20% 60 ml/min 40%
Implantology	Open pulp chamber	128:1	100 - 40'000 rpm	0.48 - 4.8 Ncm	30 ml/min 20%
Surgery	endo file 2	30:1	- Willia Cittin	With a C/CT. T	90 ml/min 60%
34. ge. y	endo file 3	27:1	Depends on the CA	Depends on the CA	120 ml/min 80%
	endo file 4	20:1			150 ml/min 100%
	endo file 5	16:1	-		
	endo file 6	10:1	-		
	endo file 7	1:1	-		
	endo file 8	1:2	1		
	endo file 9	1:5	1		
					_
Implantology	Procedure 1	128:1	100 - 40'000 rpm	0.48 - 4.8 Ncm	30 ml/min 20%
Endodontics	Procedure 2	64:1	with a CA 1 : 1	with a CA 1 : 1	60 ml/min 40%
			-	1	

30:1

27:1

20:1

16:1 10:1 1:1 1:2 1:5 Depends on the CA

90 ml/min 60%

120 ml/min 80%

150 ml/min 100%

Depends on the CA

Table of contents

1	Symbols	Page
	Meaning of symbols	2
2	Description	
	Identification	3
	Intended use	3 3 3 3
	Environment	3
	Environmental protection and information for disposal of the instrument	3
3	Set supplied	4
4	Options	4
_		
5	Technical description Technical data	5
	Electromagnetic compatibility	6-7
6	Installation	8-9
	Installation	<u> </u>
7	Description of keys and elements	10
8	Operation	
	Description of functions	11
	Start-up	12
	Pre-settings (SETUP)	12-13
	Description of programs	14
	- Implantology	
	- Endodontics - Surgery	
	- Surgery	
9	List of errors / Toubleshooting	15
10	Default values	
	Implantology	16+33
-	Endodontics	16+34
	Surgery	16+34
11	Maintenance	
	Servicing	16
	Information	16
	Cleaning-disinfection	16
	Important	16
<u>1</u> 2	Generalities and guarantee	
	General information	16
	Terms of guarantee	16

1 Meaning of symbols

(€ 0123

CE Marking with number of the notified body.

Rx Only

Caution: Federal law (USA) restricts this device to sale by or on the order of a licensed healthcare practitioner.



Protective earth (ground).



Main switch

 $\ensuremath{\mathrm{ON}}\xspace$ - The instrument is energized.

OFF - The instrument is de-energized.



Fuse Ø 5 x 20 mm.



Alternating current.



Device of type B.



CAUTION! Dangerous voltage.



Element sensitive to electrostatic discharges.



CAUTION! Refer to the accompanying documents.



Danger of pinching. Do not put your fingers in rotating parts.



Variability in steps.



Symbol for «Water-cooling».



Symbol for «peristaltic pump».



Recyclable materials.



Recyclable electrical and electronic material.



Sterilisable up to the specified temperature.



Operating mode intermittent.



Manufacturer.

STERILE EO

Sterilise with Ethylene Oxyde

2 Description

Identification

Electronically controlled tabletop device for dentistry allowing operation of an MX-LED CHIROPRO motor with variable speed control by a pedal.

A peristaltic pump conveys the physiological liquid via a disposable irrigation line without being contaminated.

The device's LCD display indicates the stage of implant fitting, the instrument's ratio, the bur speed, torque value and irrigation flow setting.

Intended use

The system is to be used by dentists and surgeons in dental offices and hospitals. The system is designed to control a dental micromotor which can drive a dental hand-piece fitted with appropriate tools to cut hard and soft tissues in the mouth and to screw dental implants.

The system is intended for use in dentistry for implantology, dental surgery and endodontic work. Any use other than that for which this product is intended is unauthorised and may be dangerous. The medical device meets all the current legal requirements.

Environment



The device is not designed for use in an explosive atmosphere (anaesthetic gas).

Working Temperature: $+10^{\circ}\text{C} (50^{\circ}\text{F}) \text{ to } +25^{\circ}\text{C} (77^{\circ}\text{F})$

Relative humidity: 30% to 80%, including condensation

Atmospheric pressure: 700 hPa to 1060 hPa

Transport Environmental conditions

and storage Temperature: -25°C (-13°F) to +70°C (158°F)

Relative humidity: 10% to 100%, including condensation

Atmospheric pressure: 500 hPa to 1060 hPa

Environmental protection and information for disposal of the instrument



The disposal and/or recycling of materials must be performed in accordance with the legislation in force.



This device and its accessories must be recycled.

Electrical and electronic equipment may contain dangerous substances which constitute health and environmental hazards. The user must return the device to its dealer or establish direct contact with an approved body for treatment and recovery of this type of equipment (European Directive 2002/96/EC).

3 Set supplied

1x	CHIROPRO L control	REF	1600679-001
1x	Micromotor MX-LED CHIROPRO	REF	1600605-001
1x	Cable for MX-LED micromotor	REF	1600606-001
1x	Pack of 10 disposable sterile lines	REF	1500984-010
1x	10 attachments collars for fastening the sterile irrigation line to a cable	REF	1303711-010
1x	Bracket for fluid bottle	REF	1303393-001
1x	Pedal 3 buttons	REF	1600631-001
1x	Cable system 3P, US / Asia, length 2,00 m	REF	1300067-001
1x	Instruction	REF	2100189

4 Options

Contra-angle handpiece CA 20:1 L (light)	REF 1600598-001
Contra-angle handpiece CA 20:1 (without light)	REF 1600632-001
Contra-angle handpiece CA 20:1 L Micro-Series (light)	REF 1600692-001
Micromotor MX-LED CHIROPRO	REF 1600605-001
Cable for MX-LED CHIROPRO micromotor	REF 1600606-001
Pack of 10 disposable sterile lines	REF 1500984-010
10 attachments collars for fastening the sterile irrigation line to a cable	REF 1303711-010
Pedal 3 buttons	REF 1600631-001
Cable system 3P, Switzerland, length 2,00 m	REF 1300065-001
Cable system 3P, Europe, length 2,50 m	REF 1300066-001
Cable system 3P, US / Asia, length 2,00 m	REF 1300067-001
10 fuse T4.0A L 250 VAC	REF 1301560-010

5 Technical Description: Technical data

Voltage

100 – 240 VAC 50 – 60 Hz

Fuses

2 fuses T4.0A L 250 VAC, breaking capacity 40A

Power demand

300 VA

Classification

Class IIa in accordance with European Directive 93/42/EEC concerning medical devices.

Electric insulation class

Class I, per IEC 60601-1

(apparatus protected against electric shocks).

Degree of protection

IP 40 (protection against insertion of objects larger than 1 mm).

Dimensions L x W x H

309 x 220 x 123 mm. Height with bracket 506 mm

Weight

Housing 2.7 kg Pedal 830 g Cable 105 g Bracket 115 g

Memory

Implantology mode: Storage in memory of 8 implant fitting

sequences of 10 steps each.

Endodontics mode: Storage in memory of an endodontics

sequence of 10 steps.

Surgery mode: Storage in memory of 4 separate

programs.

Interface Languages

French, German, English, Italian, Spanish, Portuguese, Japanese and Russian.

List of errors & Toubleshooting

Page 15

Bracket

Stainless steel

Intended for use with:see instructionMicromotor MX-LED CHIROPROREF 2100161Cable for MX-LED CHIROPRO micromotorREF 2100163Contra-angle CA 20:1, without lightREF 2100209Contra-angle CA 20:1 L, with lightREF 2100209Contra-angle CA 20:1 L Micro-Series, with light REF 2100209

The use of the system with other handpieces, motors or cables has not been validated/certified.

Peristaltic pump

Pump delivery: From 30 to 150 ml/min. (5 levels).

Hose for pump: External Ø 5.60 mm,

internal Ø 2.40 mm Wall thickness 1.60 mm.

Pedal

REF 1600631-001

Dimensions (LxWxH) 250 x 205 x 54 mm with handle: $250 \times 205 \times 144 \text{ mm}$

The pedal is waterproof (IP X8 in accordance with CEI 529).

Cables

Length of cables: Pedal cable 2,90 m Motor cable 2,00 m

WARNING

To prevent any risk of electric shock, this device must be connected only to a power supply network provided with protective earth.

Modification of the device forbidden.

The system is not adapted to be used in the presence of inflammable gases (e.g. anaesthetic gas).

Do not attempt to open the apparatus when it is connected to the electric mains. Beware of electric shocks.

Applied parts (per IEC 60601-1)

 Micromotor MX-LED CHIROPRO
 REF 1600605-001

 CA 20:1 L
 REF 1600598-001

 CA 20:1
 REF 1600632-001

 CA 20:1 L Micro-Series
 REF 1600692-001

 Irrigation lines
 REF 1500984-010

Operating mode:

Intermittent ON: 5 min. OFF: 40 min.

5 Technical Description: Electromagnetic compatibility

Precautions regarding Electromagnetic Compatibility (EMC)

Electro-medical equipment needs special precautions regarding EMC and needs to be installed and put into service according to the EMC information provided in the present document.

CHIROPRO L complies with the EMC requirements according to IEC 60601-1-2. Radio transmitting equipment, cellular phones, etc. shall not be used in the close proximity of the device since they could influence the performance of the device. Particular precaution is required when using strong emission sources such as High Frequency surgical and similar equipment so that the HF cables are not routed on or near the device. If in doubt, please contact a qualified technician or Bien-Air Dental.

CHIROPRO L should not be used adjacent or stacked with other equipment. If adjacent or stacked use is necessary, CHIROPRO L should be monitored to verify normal operation in the configuration in which it will be used.

WARNING!

The use of accessories, transducers and ca-bles other than those specified, with the exception of transducers and cables sold by Bien-Air Dental as replacements parts for internal components, may result in increased emissions or decreased immunity of CHIROPRO L. Dental professionals need to be aware of potential electromagnetic interference between electronic dental devices and active implantable medical devices, and should always inquire about any devices implanted in the patient.

Guidance and manufacturer's declaration - electromagnetic emissions

CHIROPRO L is intended for use in the electromagnetic environment specified below. The customer or the user of CHIROPRO L should ensure that it is used in such an environment.

Emissions test	Compliance	Electromagnetic environment - guidance
RF emissions CISPR 11	Group 1	CHIROPRO L uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emissions CISPR 11	Class B	CHIROPRO L is suitable for use in all Establishments, including domestic establishments and those directly connected
rmonic emissions Not applicable 61000-3-2		to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Voltage fluctuations/flicker emissions IEC 61000-3-3	Conform	

Guidance and manufacturer's declaration - electromagnetic immunity

CHIROPRO L is intended for use in the electromagnetic environment specified below.

The customer or the user	of CHIROPRO L shou	ld ensure that it is	used in such an	environment.

Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
Electrostatic	±6 kV contact	±6 kV contact	Floors should be wood, concrete or ceramic tile. If floors
discharge (ESD)			are covered with synthetic material, the relative humidity
	±8 kV air	±8 kV air	should be at least 30%.
IEC 61000-4-2			offodia pe at feast 5070
Electrical fast	±2 kV for power	±2 kV for power	Mains power quality should be that of a typical commer-
transient/burst	supply lines	supply lines	cial or hospital environment.
IEC 61000-4-4	No input/output lines	No input/output lines	can or noopaan environment
Surge	±0.5 kV line to line	±0.5 kV line to line	
IEC 61000-4-5	±1 kV line to line	±1 kV line to line	Mains power quality should be that of a typical commer-
	±0.5 kV line to earth	±0.5 kV line to earth	cial or hospital environment.
	+1 kV line to earth	±0.5 KV line to earth	
x z 1, 1, 1, 1	±2 kV line to earth	±2 kV line to earth	
Voltage dips, short	<5% U _T	<5% U _T	
interruptions and variations de tension	(>95% dip in U_T)	(>95% dip in U_T)	Mains power quality should be that of a typical commer-
	for 0,5 cycle	for 0,5 cycle	cial or hospital environment. If the user of CHIROPRO L
voltage variations	40% U _T	40% U _T	requires continued operation during power mains inter-
on power supply			ruptions, it is recommended that CHIROPRO L be pow-
input lines 1	$(60\% \text{ dip in } U_{\text{T}})$	$(60\% \text{ dip in } U_{\text{T}})$	ered from an uninterruptible power supply or a battery.
	for 5 cycles $70\% U_{\text{T}}$	for 5 cycles $70\% U_{\rm T}$	
IEC 61000-4-11			
IEC 01000-4-11	$(30\% \text{ dip in } U_{\text{T}})$	$(30\% \text{ dip in } U_{\text{T}})$	
	for 25 cycles	for 25 cycles	
	<5% U₁	<5% U₁	
	(>95% dip in $U_{\rm T}$)	(>95% dip in $U_{\rm T}$)	
	for 5 sec	for 5 sec	
Power frequency			Power frequency magnetic fields should be at levels
(50/60 Hz)	3 A/m	3 A/m	characteristic of a typical location in a typical commer-
magnetic field			cialor hospital environment.
IEC 61000-4-8			

NOTE U_T is the a.c. mains voltage prior to application of the test level.

5 Technical Description: Electromagnetic compatibility

Guidance and manufacturer's declaration - electromagnetic immunity

CHIROPRO L is intended for use in the electromagnetic environment specified below.

The customer or the user of CHIROPRO L should ensure that it is used in such an environment.

Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance	
			Portable and mobile RF communications equipment should be used no closer to any part of CHIROPRO L, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.	
			Recommended separation distance	
Conducted RF IEC 61000-4-6	3 Vrms 150 kHz to 80 MHz	3 V	$d = 1.2\sqrt{P}$ $d = 1.2\sqrt{P}$ $d = 2.3\sqrt{P}$ 80 MHz to 800 MHz $d = 2.3\sqrt{P}$ 800 MHz to 2,5 GHz	
Radiated RF IEC 61000-4-3	3 V/m 80 MHz to 2,5 GHz	3 V/m	where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in metres (m). Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey, should be less than the compliance level in each frequency range. Interference may occur in the vicinity of equipment marked with the following symbol: $((\bullet))$	

NOTE 1 At 80 MHz and 800 MHz, the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

^b Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3 V/m.

Recommended separation distances between portable and mobile RF communications equipment and the CHIROPRO L

The CHIROPRO L is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the CHIROPRO L can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the CHIROPRO L as recommended below, according to the maximum output power of the communications equipment.

Rated maximum output	Separation distance according to frequency of transmitter						
power of transmitter		m					
\mathbf{W}	150 kHz to 80 MHz	0 kHz to 80 MHz 80 MHz to 800 MHz 800 MHz to 2,5 GHz					
	$d = 1.2\sqrt{P}$	$d = 1.2\sqrt{P}$	$d = 2.3\sqrt{P}$				
0.01	0.12	0.12	0.23				
0.1	0.38	0.38	0.73				
1	1.2	1.2	2.3				
10	3.8	3.8	7.3				
100	12	12	23				

For transmitters rated at a maximum output power not listed above, the recommended separation distance d in metres (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

NOTE 1 At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

^a Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the CHIROPRO L is used exceeds the applicable RF compliance level above, the CHIROPRO L should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating the CHIROPRO L.

6 Installation

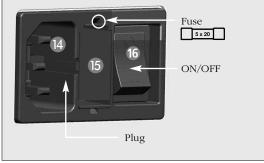


fig. 1

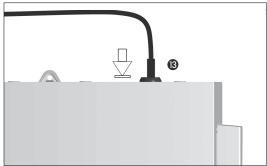


fig. 2

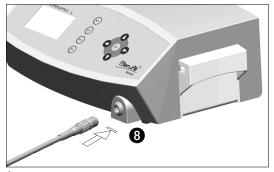


fig. 3

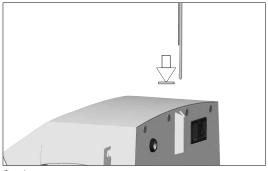


fig. 4



Installation

- A. CHIROPRO L may be positioned on a table, on a trolley or another surface, but in no case on the floor.
 - Power plug 4 is the device for disconnection in case of problems, and it must be easily accessible at all times.
- B. The fuse box may be opened with a screwdriver . 100 240 Vac = fuse T-4.0 A L 250 VAC REF 1301560-010
- C. The apparatus is powered by your line voltage (100/115/230 Vac). Connect the power cable to the plug **fig. 1**.
- D. Connect the pedal cable to the output provided on the rear panel, guiding the connector and plug by means of the index pin on the connector **fig. 2**.

Do not raise the pedal using the connection cable.

E. Connect the MX-LED CHIROPRO micromotor cable to the motor output, guiding the connector and plug by means of the index pin and red dot on the connector **fig. 3**.

F. Align and attach the bracket to the housing provided on the console's rear and suspend the flask or bottle **fig. 4**.

G. Check the packaging integrity, as well as the expiration date of the irrigation line.

Only lines supplied by Bien-Air Dental ensure trouble-free operation. These lines are sterile and for single use. Re-use may result in microbiological contamination of the patient.




6 Installation



H. Remove the single-use sterile irrigation line from its pouch.

fig. 6

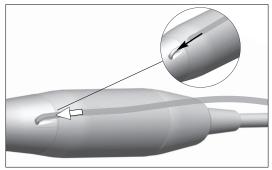

Fitting on the spray tube

Installation on the peristaltic pump

Close the pump lid, fig. 8.

positioning of the cassette.


Danger of pinching!


Warning!

J. Install the plastic cassette in the peristaltic pump. Check that the cassette is clipped correctly.

Do not run the pump while the lid is open.


I. Connect the flexible hose of the irrigation line to the spray tube of the handpiece or contra-angle fig. 7.

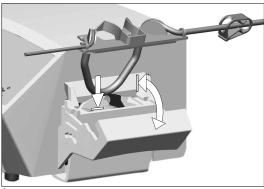


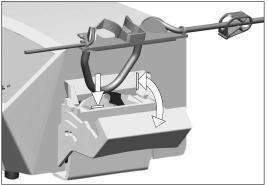


K. Perforate the cap of the physiological liquid flask with the pointed end of the irrigation line after removing the protective cap.

  If there is resistance to closing, open the lid again and check the correct





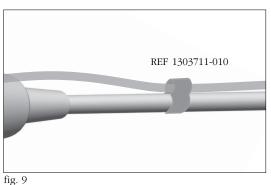


Stopping procedure

The device can be safely stopped using the main switch 16.



7 Description of keys and elements

DEVICE SCREEN

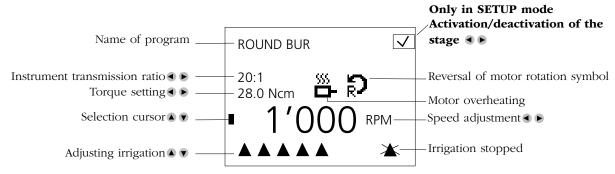

- COMMAND TO REVERSE THE ROTATION OF 0 THE MX-LED CHIROPRO MICROMOTOR
- 8 "SETUP" MENU CALL-UP KEY
- PARAMETERS BACKUP KEY
- RETURN KEY
- **COMMANDS DEVICE**
 - Down keyUp key

 - Left key (-)
 Right key (+) } adjusting
 - OK) Confirmation/selection key
 - In implantology/endodentistry mode: next stage
- PERISTALTIC PUMP LID 0
- 8 **MX-LED CHIROPRO MICROMOTOR** CONNECTOR
- Ø IRRIGATION ON/OFF CONTROL BUTTON ON PEDAL

"PROGRAM" BUTTON ON PEDAL 1

In implantology/endodentistry mode:

- Short press: next stage
- Long press: previous stage
- 0 BUTTON TO REVERSE THE ROTATION OF THE MX-LED CHIROPRO MICROMOTOR ON PEDAL
- VARIABLE SPEED DRIVE ON PEDAL
- PEDAL CONNECTOR ®
- **(4**) MAINS CONNECTOR (100/115/230 VAC)
- **(FUSE HOLDER**
- MAIN SWITCH ON THE DEVICE 13
- **LABEL**
- **BRACKET SUPPORT**
- **MX-LED CHIROPRO MICROMOTOR**

9 List of errors & Toubleshooting

than 2 sec. The motor control card limits the power supplied to the motor to prevent motor correlating. **Guipment initialisation error** The fellowing error may occur at start-up of CHIROPRO I. **Check on the integrity of the CHIROPRO I. memory **NTT ERROR 1	Message		Cause of error	Action
The motor is blocked for more than 2 sec. The motor control card limits the power supplied to the motor to prevent motor overheating. Safety Avoid extended use. Safety The memory data check failed. Press the ESC key to try to restore the memory. Contact Bien-Air Dental SA. Societ the memory. Contact Bien-Air Dental SA. Societatic pump overheating. Peristaltic pump overheating. Peristaltic pump motor overheating. Peristaltic pump motor overheating. Peristaltic pump motor overheating. Safety Safety Avoid extended use. Press the ESC key to try to restore the memory. Contact Bien-Air Dental SA. Societatic Bien-Air Dental SA	Release the		Safety	
power supplied to the motor to prevent motor overheating.	pedal	than 2 sec.		agani.
. Check on the integrity of the CHIROPRO L memory The memory is corrupt Please contact Bien-Air Dental SA. ESC: restore Press the ESC key to try to restore the memory. The memory data check failed. Press the ESC key to try to restore the memory. Contact Bien-Air Dental SA. ESC: restore Press the ESC key to try to restore the memory. Contact Bien-Air Dental SA. Peristal SA. ESC: restore The pedal is not connected. Please check the connection. ESC: exit Press the ESC key to try to restore the memory. Contact Bien-Air Dental SA. Peristal SA. Peri	<u>^</u> #	power supplied to the motor to	Safety	Avoid extended use.
The memory is corrupt! Please contact Bien-Air Dental SA. ESC: exist The memory data check failed. Press the ESC key to try to restore the memory. Contact Bien-Air Dental SA. Previce operating error the following errors may occur during operation of the device Joss of pedal connection RROR 1 The pedal is not connected! Please check the connection. ESC: exit Peristaltic pump overheating! Please wait for it to cool. ESC: exit The pedal is not connected correctly. Check pedal connection. Contact Bien-Air Dental SA. Contact Bien-Air Dental SA. Contact Bien-Air Dental SA. ESC: exit Peristaltic pump motor overheating Peristaltic pump motor overheating Wait until the system cools. Contact Bien-Air Dental SA. ESC: exit Loss of motor connected. Please check the connection. ERROR 3 The motor is not connected! Please check the connection. ESC: exit Motor cable fault RROR 5 Motor cable fault RROR 6 System overheating! Please wait for it to cool. ESC: exit Motor control overheating! Please wait for it to cool. ESC: exit Motor control overheating! Please change cable. ESC: exit Check motor control card Check motor cable. Contact Bien-Air Dental SA. Con			RO L	
Please contact Bien-Air Dental SA. BY-Vice operating error the following errors may occur during operation of the device Joss of pedal connection RROR 1 The pedal is not connected! Please check the connection. ESC: exit The pedal is not connected correctly. Peristaltic pump overheating RROR 2 Irrigation pump overheating! Please wait for it to cool. ESC: exit The motor is not connected! Please contact Bien-Air Dental SA. ESC: exit The motor is not connected! Please check the connection. RROR 4 The motor is not connected! Please check the connection. RROR 5 Motor cable fault RROR 6 System overheating! Please wait for it to cool. ESC: exit Motor control overheating Motor power fault. The motor control overheating of motor control card (electrical fault) Please change cable. ESC: exit Overheating Overheating of motor control card (electrical fault) ESC: exit Overheating Overheating of motor control card (electrical fault) System electrical fault ERROR 5 System clectrical fault ERROR 6 System overheating! Please contact Bien-Air Dental SA. ESC: exit Overheating of motor control card (electrical control of motor). Contact Bien-Air Dental SA. Communication fault with motor control card power supply undervoltage: [EC1001] Motor control card power supply overvoltage: [EC1001] Motor control card faults:	1. Check on th	e integrity of the CHIROPRO L m	emory	
The pedal is not connected! Please check the connection. ESC: exit The pedal is not connected correctly. Check pedal connection. ESC: exit The pedal is not connected correctly. Check pedal connection. Contact Bien-Air Dental SA.	INIT ERROR 1	Please contact Bien-Air Dental SA.	The memory data check failed.	restore the memory.
The pedal is not connected! Please check the connection. ESC: exit			he device	
Please check the connection. ESC: exit Peristaltic pump overheating RROR 2 Irrigation pump overheating! Please wait for it to cool. ESC: exit Peristaltic pump general error RROR 3 Irrigation pump fault! Please contact Bien-Air Dental SA. ESC: exit Peristaltic pump general error RROR 4 The motor is not connected! Please check the connection. ESC: exit Motor cable fault RROR 5 Motor cable fault! Please change cable. ESC: exit Motor cable may be defective. ESC: exit Motor control overheating RROR 6 System overheating! Please wait for it to cool. ESC: exit System electrical fault ESC: exit Contact Bien-Air Dental SA. Check motor canble. Contact Bien-Air Dental SA. Check motor cable. Contact Bien-Air Dental SA. ESC: exit Contact Bien-Air Dental SA. Contact Bien-Air Dental SA. ESC: exit Communication fault with motor control card please contact Bien-Air Dental SA. ESC: exit Communication fault with motor control card power supply undervoltage: [EC102] Motor control card power supply overvoltage: [EC102] Other motor control card faults:	1. Loss of peda	al connection		
RROR 2 Irrigation pump overheating! Please wait for it to cool. ESC: exit Peristaltic pump general error RROR 3 Irrigation pump fault! Please contact Bien-Air Dental SA. ESC: exit Peristaltic pump electrical fault. Contact Bien-Air Dental SA. Peristaltic pump electrical fault. Please contact Bien-Air Dental SA. ESC: exit Loss of motor phase fault. The motor is not connected! Please check the connection. ESC: exit Motor cable fault RROR 5 Motor cable fault Please change cable. ESC: exit Motor control overheating! Please wait for it to cool. ESC: exit Overheating of motor control card (electrical control of motor). System electrical fault ENTOR 6 System electrical fault ENTOR 7 System electrical fault ENTOR 8 System electrical fault ENTOR 9 Motor control of motor). Communication fault with motor control card (EC100) Motor control card power supply undervoltage: [EC101] Motor control card power supply overvoltage: [EC101] Motor control card faults:	ERROR 1	Please check the connection.	The pedal is not connected correctly.	_
Please wait for it to cool. ESC: exit Peristaltic pump general error RROR 3 Irrigation pump fault! Please contact Bien-Air Dental SA. ESC: exit Peristaltic pump electrical fault. Please contact Bien-Air Dental SA. ESC: exit Dental SA. ESC: exit Peristaltic pump electrical fault. Please contact Bien-Air Dental SA. ESC: exit Loss of motor phase fault. The motor is not connected: Please check the connection. ESC: exit Motor cable fault Please change cable. ESC: exit Motor control overheating RROR 6 System overheating! Please wait for it to cool. ESC: exit Overheating of motor control card (electrical control of motor). System electrical fault EROR System electrical fault EROR System electrical fault EEN ERROR Error codel System electrical fault Please contact Bien-Air Dental SA. ESC: exit Communication fault with motor control card (electrical control card power supply undervoltage: [EC101] Motor control card power supply overvoltage: [EC102] Other motor control card faults:	2. Peristaltic p	ump overheating		
Peristaltic pump general error IRROR 3	ERROR 2		Peristaltic pump motor overheating	
Irrigation pump fault! Please contact Bien-Air Dental SA. ESC: exit Interpretation pump fault! Please contact Bien-Air Dental SA. ESC: exit Interpretation pump fault! Please contact Bien-Air Dental SA. ESC: exit Interpretation pump fault! Please check the connected! Please check the connection. ESC: exit Interpretation pump fault. The motor phase fault. The motor is not connected correctly. ESC: exit Interpretation pump fault. The motor phase fault. The motor connected correctly. The motor connected correctly. ESC: exit Interpretation pump fault. The motor is not connected correctly. The motor connected correctly. The motor cable fault. The motor cable may be defective. The motor cable may be defective. The motor control card (electrical fault please wait for it to cool. ESC: exit Interpretation pump fault. The motor is not connected. The motor cable fault. The motor cable may be defective. The motor control card (electrical fault please wait for it to cool. The motor control card fault with motor control card power supply undervoltage: [EC101] The motor control card faults: Interpretation pump fault. The motor is not connected. The motor control card fault. The motor control car		ESC: exit		
Please contact Bien-Air Dental SA. ESC: exit Loss of motor connection RROR 4 The motor is not connected! Please check the connection. ESC: exit Motor cable fault RROR 5 Motor cable fault! Please change cable. ESC: exit Motor control overheating RROR 6 System overheating! Please wait for it to cool. ESC: exit System electrical fault EROR 7 System electrical fault! Please contact Bien-Air Dental SA. ESC: exit Communication fault with motor control card (electrical control card (EC100) Motor control card (EC100) Motor control card power supply undervoltage: [EC101] Motor control card faults:	3. Peristaltic p	ump general error		
The motor is not connected! Please check the connection. ESC: exit Motor cable fault Please change cable. ESC: exit Motor control overheating! Please wait for it to cool. ESC: exit System electrical fault System electrical fault ERROR System electrical fault System electrical Bien-Air Dental SA. ESC: exit Communication fault with motor control card please contact Bien-Air Dental SA. ESC: exit Communication fault with motor control card please contact Bien-Air Dental SA. ESC: exit Communication fault with motor control card please contact Bien-Air Dental SA. ESC: exit Communication fault with motor control card please contact Bien-Air Dental SA. ESC: exit Communication fault with motor control card power supply undervoltage: [EC101] Motor control card power supply overvoltage: [EC102] Other motor control card faults:	ERROR 3	Please contact Bien-Air Dental SA.	Peristaltic pump electrical fault.	Contact Bien-Air Dental SA.
Please check the connection. ESC: exit Motor cable fault RROR 5 Motor cable fault! Please change cable. ESC: exit Motor control overheating RROR 6 System overheating! Please wait for it to cool. ESC: exit C. System electrical fault System electrical fault System electrical fault ERROR BETOR Code System electrical fault System electrical fault System electrical fault About control of motor control card (electrical control of motor). Communication fault with motor control card (EC100) Motor control card power supply undervoltage: [EC101] Motor control card faults: Contact Bien-Air Dental SA. Control card: [EC100] Motor control card power supply undervoltage: [EC101] Motor control card power supply overvoltage: [EC102] Other motor control card faults:	4. Loss of mot	or connection		
Motor cable fault! Please change cable. ESC: exit Motor power fault. The motor cable may be defective. Contact Bien-Air Dental SA. Wait until the system cools. Contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Contact Bien-Air Dental SA. Contact Bien-Air Dental SA. Control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Communication fault with motor control card: Please contact Bien-Air Dental SA. Communication fault with motor control ca	ERROR 4	Please check the connection.	*	
Please change cable. ESC: exit The motor cable may be defective. Contact Bien-Air Dental SA. Communication fault with motor control card: [EC100] Motor control card power supply undervoltage: [EC101] Motor control card power supply overvoltage: [EC102] Other motor control card faults:	5. Motor cable	fault		
System overheating! Please wait for it to cool. ESC: exit Overheating of motor control card (electrical control of motor). Contact Bien-Air Dental SA. System electrical fault! Please contact Bien-Air Dental SA. Error code System electrical fault! Please contact Bien-Air Dental SA. ESC: exit Communication fault with motor control card: [EC100] Motor control card power supply undervoltage: [EC101] Motor control card power supply overvoltage: [EC102] Other motor control card faults:	ERROR 5	Please change cable.		1
Please wait for it to cool. ESC: exit (electrical control of motor). Contact Bien-Air Dental SA. Contact Bien-Air Dental SA. System electrical fault Sen Error code System electrical fault! Please contact Bien-Air Dental SA. Error code Motor control card power supply undervoltage: [EC101] Motor control card power supply overvoltage: [EC102] Other motor control card faults:	6. Motor contr	ol overheating		
System electrical fault! Please contact Bien-Air Dental SA. ESC: exit Communication fault with motor control card: [EC100] Motor control card power supply undervoltage: [EC101] Motor control card power supply overvoltage: [EC102] Other motor control card faults:	ERROR 6	Please wait for it to cool.		
Please contact Bien-Air Dental SA. ESC: exit Motor control card power supply undervoltage: [EC102] Motor control card power supply overvoltage: [EC102] Other motor control card faults:	7. System elect	trical fault		
Motor control card power supply undervoltage: [EC101] Motor control card power supply overvoltage: [EC102] Other motor control card faults:	GEN ERROR [Error code]	Please contact Bien-Air Dental SA.		Contact Bien-Air Dental SA.
overvoltage: [EC102] Other motor control card faults:		ESC: exit	undervoltage: [EC101]	
			Motor control card power supply overvoltage: [EC102]	

10 Default values

Implantology:

Default values page 33

The table shows the default operating values for 8 different implantology sequences.

Endodontics:

Default values page 34

The table shows the default operating values for the endodontics sequence.

Surgery:

Default values page 34

The table shows the default operating values for 4 different surgical sequences.

11 Maintenance

Only use original Bien-Air Dental maintenance products and parts or those recommended by Bien-Air Dental. Using other products or parts may cause operational failure and/or void the guarantee.

Servicing

Never disassemble the device. For any modification and repair, we recommend that you contact your regular supplier or Bien-Air Dental directly. Bien-Air Dental asks the user to have its dynamic instruments checked or inspected at least once a year.

Information

The technical specifications, illustrations and dimensions contained in these instructions are given only as a guide. They may not be the subject of any claim. The manufacturer reserves the right to make technical improvements to its equipment, without amending these instructions. For all additional information, please contact Bien-Air Dental SA at the address indicated on the back cover.

Cleaning-disinfection

- Disinfect the surfaces of the console and pedal with a clean cloth soaked in a suitable product. Do not exert any pressure on the screen. Do not immerse in disinfectant solution
- \bullet Not designed for an ultrasonic bath. \bullet Use a new sterile irrigation line for each patient. \bullet AAMI TIR 12:2004 - Disinfection level: intermediate.

Important

For maintenance: see instruction

- MX-LED CHIROPRO micromotor REF 2100161

- Cable for micromotor MX-LED CHIROPRO REF 2100163

- Contra-angle CA 20:1 L REF 2100209

- Contra-angle CA 20:1 L Micro-Series REF 2100209

12 Generalities and guarantee

General information

The device must be used by a qualified professional in compliance with the current legal provisions concerning workplace safety, health and accident prevention measures, and these working instructions. In accordance with such requirements, the operators:

- must only use devices that are in perfect working order; in the event of irregular functioning, excessive vibration, abnormal heating or other signs that may indicate malfunction of the device, the work must be stopped immediately; in this case, contact a repair centre that is approved by Bien-Air Dental;
- must ensure that the device is used only for the purpose for which it is intended, must protect themselves, their patients and third parties from any danger, and must avoid contamination through the use of the product.

Terms of guarantee

Bien-Air Dental grants the user a guarantee covering all functional defects, material or production faults.

The device is covered by this guarantee for 24 months from the date of invoicing.

In case of justified claim, Bien-Air Dental or its authorised representative will fulfil the company's obligations under this guarantee by repairing or replacing the product free of charge.

Any other claims, of whatever nature, in particular in the form of a claim for damages and interest, are excluded.

Bien-Air Dental shall not be held responsible for damage or injury and the consequences thereof, resulting from:

- \bullet excessive wear and tear \bullet improper use \bullet non-observance of the instructions for installation, operation and maintenance
- unusual chemical, electrical or electrolytic influences poor connections, whether of the air, water or electricity supply.

The guarantee does not cover flexible "fibre optic" type light conductors, or any parts made of synthetic materials.

The guarantee shall become null and void if the damage and its consequences are due to improper manipulation of the product, or modifications to the product carried out by persons not authorised by Bien-Air Dental. Claims under the terms of the guarantee will be considered only on presentation, together with the product, of the invoice or the consignment note, on which the date of purchase, the product reference and the Serial No. should be clearly indicated.

Default values

Implantology: default values

The table shows the default operating values for 8 different implantology sequences. These default values represent common settings used during implant procedures.

Implant PRG1 / PRG8	Implant PRG2	Implant PRG3	Implant PRG4	Implant PRG5	Implant PRG6	Implant PRG7
ROUND BUR 1	ROUND BUR	ROUND BUR	ROUND BUR	ROUND BUR	ROUND BUR	PILOT DRILL 1
20:1	20:1	20:1	20:1	20:1	20:1	20:1
28.1 Ncm	28.1 Ncm	28.1 Ncm	28.1 Ncm	28.1 Ncm	35.3 Ncm	28.1 Ncm
1'000 RPM	2'000 RPM	1'000 RPM	1'200 RPM	1′500 RPM	1′500 RPM	800 RPM
					$\triangle A A \triangle \triangle$	
ROUND BUR 2	PILOT DRILL	DRILL 1	DRILL 1	DRILL 1	DRILL 1	PILOT DRILL 2
20:1	20:1	20:1	20:1	20:1	20:1	20:1
28.1 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	28.1 Ncm
1'000 RPM	800 RPM	800 RPM	800 RPM	500 RPM	1′500 RPM	800 RPM
		\triangle			$\triangle A A \triangle \triangle$	
DRILL 1	DRILL 1	DRILL 2	DRILL 2	DRILL 2	DRILL 2	DRILL 1
20:1	20:1	20:1	20:1	20:1	20:1	20:1
35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm
800 RPM	800 RPM	800 RPM	800 RPM	500 RPM	1′500 RPM	600 RPM
DRILL 2	DRILL 2	DRILL 3	DRILL 3	DRILL 3	DRILL 3	DRILL 2
20:1	20:1	20:1	20:1	20:1	20:1	20:1
35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm
600 RPM	800 RPM	800 RPM	800 RPM	500 RPM	1′500 RPM	500 RPM
DRILL 3	DRILL 3	DRILL 4	DRILL 4	DRILL 4	DRILL 4	DRILL 3
20:1	20:1	20:1	20:1	20:1	20:1	20:1
35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm
500 RPM	800 RPM	800 RPM	800 RPM	500 RPM	1′500 RPM	400 RPM
DRILL 4	DRILL 4	DRILL 5	DRILL 5	DRILL 5	DRILL 5	SHAPING DRILL
20:1	20:1	20:1	20:1	20:1	20:1	20:1
35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm
400 RPM	800 RPM	800 RPM	800 RPM	500 RPM	1′500 RPM	250 RPM
TAPPING	TAPPING	TAPPING	TAPPING	TAPPING	TAPPING	TAPPING
20:1	20:1	20:1	20:1	20:1	20:1	20:1
35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm
15 RPM	15 RPM	15 RPM	15 RPM	15 RPM	20 RPM	20 RPM
TAP UNSCREWING	TAP UNSCREWING	TAP UNSCREWING	TAP UNSCREWING	TAP UNSCREWING	TAP UNSCREWING	TAP UNSCREWING
20:1	20:1	20:1	20:1	20:1	20:1	20:1
42.5 Ncm	42.5 Ncm	42.5 Ncm	42.5 Ncm	42.5 Ncm	42.5 Ncm	42.5 Ncm
15 RPM REV	15 RPM REV	15 RPM REV	15 RPM REV	15 RPM REV	15 RPM REV	20 RPM REV
IMPLANT SCREWING	IMPLANT SCREWING	IMPLANT SCREWING	IMPLANT SCREWING	IMPLANT SCREWING	IMPLANT SCREWING	IMPLANT SCREWING
20:1	20:1	20:1	20:1	20:1	20:1	20:1
35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm	35.3 Ncm
15 RPM	15 RPM	15 RPM	15 RPM	15 RPM	15 RPM	15 RPM
UNSCREWING	UNSCREWING	UNSCREWING	UNSCREWING	UNSCREWING	UNSCREWING	UNSCREWING
20:1	20:1	20:1	20:1	20:1	20:1	20:1
54.7 Ncm	54.7 Ncm	54.7 Ncm	54.7 Ncm	54.7 Ncm	54.7 Ncm	54.7 Ncm
15 RPM REV	15 RPM REV	15 RPM REV	15 RPM REV	15 RPM REV	15 RPM REV	15 RPM REV
		$\triangle \triangle \triangle \triangle \triangle$				

Default values

Endo: default values

The table shows the default operating values for the endodontics sequence.

ENIDODONITICO
ENDODONTICS
OPEN PULP CHAMBER
1:5
7.20 mNm
100'000 RPM
ENDO FILE 1
1:1
30.2 mNm
250 RPM
ΔΔΔΔΔ
ENDO FILE 2
1:1
10.1 mNm
250 RPM
ENDO FILE 3
1:1
14.9 mNm
250 RPM
ΔΔΔΔΔ
ENDO FILE 4
1:1
20.2 mNm
250 RPM
ΔΔΔΔΔ
ENDO FILE 5
1:1
30.2 mNm
250 RPM
ENDO FILE 6
1:1
20.2 mNm
250 RPM
ENDO FILE 7
1:1
14.9 mNm
250 RPM
ΔΔΔΔΔ
ENDO FILE 8
1:1
14.9 mNm
250 RPM
ΔΔΔΔΔ
ENDO FILE 9
1:1
10.1 mNm
250 RPM
ΔΔΔΔΔ

Surgery : default values

The default values of the 4 available procedures are representative of settings commonly used by clinicians for surgical procedures.

SURGERY			
PROCEDURE 1	PROCEDURE 2	PROCEDURE 3	PROCEDURE 4
1:5	1:2	1:5	1:5
0.72 Ncm	2.40 Ncm	0.72 Ncm	0.72 Ncm
100'000 RPM	80'000 RPM	50'000 RPM	100'000 RPM

Bien-Air Dental SA

Länggasse 60 Case postale 2500 Bienne 6 Switzerland Tel. +41 (0)32 344 64 64 Fax +41 (0)32 344 64 91 dental@bienair.com

Other adresses available at www.bienair.com

EC REP Bien-Air Europe Sàrl
19-21 rue du 8 mai 1945
94110 Arcueil
France